

# CECOR®

## OPERATION MANUAL & PARTS LIST

### SE15-DT



# TABLE OF CONTENTS

SECTION 1 – SAFETY INFORMATION .....	3
1.1 – CAUTION.....	3
1.2 – PRECAUTIONS .....	4
SECTION 2 – THE DRUM TOP .....	5
2.1 – UNIT IDENTIFICATION .....	5
2.2 – DRUM TOP FEATURES .....	6
SECTION 3 – INSTALLATION .....	7
3.1 – ASSEMBLE FLOAT CONTROL .....	7
3.2 – LOOSE ITEMS .....	8
SECTION 4 – OPERATION .....	9
4.1 – SETTING UP DRUM TOP.....	9
SECTION 5 – MAINTENANCE .....	11
5.1 – DAILY MAINTENANCE.....	11
5.2 – WEEKLY MAINTENANCE .....	11
5.3 – MONTHLY MAINTENANCE.....	11
SECTION 6 – TROUBLESHOOTING .....	12
SECTION 7 – REPAIR PARTS LIST.....	13
7.1 – DRUM TOP .....	13
7.2 – SUMP CLEANER HOSE 1-1/2" x 16' (STANDARD).....	15
7.3 – SUMP CLEANER HOSE 2" x 16' (OPTIONAL).....	16
SECTION 8 – TX-55PL .....	17
SECTION 9 – WARRANTY .....	18
SECTION 10 – RECORD MODEL & SERIAL NUMBER .....	19

## SECTION 1 – SAFETY INFORMATION

### 1.1 – CAUTION

   	<p style="text-align: center;"><b>⚠ CAUTION</b></p> <p>THIS EQUIPMENT IS INTENDED FOR USE WITH STANDARD METALWORKING FLUIDS (WATER-BASE &amp; CUTTING OILS) ONLY. IT SHOULD NOT BE USED WITH FLAMMABLE FLUIDS, (FUELS, PAINT, SOLVENTS, ETC.) CORROSIVE, TOXIC OR REACTIVE MATERIALS. DO NOT USE IN EXTRA-HIGH TEMPERATURE OR SPARK-HAZARD ENVIRONMENTS (OVENS WELDING AREAS, ETC.). CLEAN TANK THOROUGHLY ON A FREQUENT BASIS, ESPECIALLY WHEN PUMPING DIFFERENT TYPES OF COOLANTS AND SOLIDS OF DIFFERENT MATERIAL. WE RECOMMEND SEPARATE TANK UNITS FOR DIFFERENT SERVICES AND SEGREGATED HANDLING OF DIFFERENT COOLANTS.</p>
	<p style="text-align: center;"><b>⚠ CUIDADO</b></p> <p>ESTE EQUIPO ES PARA USO CON FLUIDOS REGULARES DE CORTE (BASE AGUA Y ACEITES DE CORTS) EXCLUSIVAMENTE. NO SE DEBE USAR CON LÍQUIDOS INFLAMABLES, (COMBUSTIBLES, PINTURA, DISOLVENTES, ETC.). MATERIALES CORROSIVOS, TÓXICOS O REACTIVOS. NO UTILIZAR EN AMBIENTES DE TEMPERATURAS ALTAS O DONDE HAY RIESGO DE CHISPAS PELIGROSAS (HORNO, AREAS DE SOLDADURA, ECT.). LIMPIA A FONDO EL TANQUE DE MANERA FRECUENTE, ESPECIALMENTE CUANDO BOMBEE TIPOS DIFERENTES DE FLUIDO DE CORTE Y SÓLIDOS DE MATERIAL DISTINTO . RECOMENDAMOS UNIDADES SEPARADO DE DEPÓSITO DE LOS DIFERENTES SERVICIOS Y SEPARADO EL MANEJO DE DIFERENTES FLUIDO DE CORTE.</p>

THIS EQUIPMENT IS INTENDED FOR USE WITH STANDARD MACHINE-TOOL COOLANT (WATER-BASE AND CUTTING OILS) ONLY. IT SHOULD NOT BE USED WITH FLAMMABLE FLUIDS (I.E. FUELS, PAINT, SOLVENTS, ETC.), CORROSIVE, TOXIC OR REACTIVE MATERIALS. DO NOT USE IN EXTRA-HIGH TEMPERATURE OR SPARK-HAZARD ENVIRONMENTS (I.E. OVENS WELDING AREAS, ETC.). CLEAN TANK THOROUGHLY ON A FREQUENT BASIS, ESPECIALLY WHEN PUMPING DIFFERENT TYPES OF COOLANT AND SOLIDS OF DIFFERENT MATERIAL. WE RECOMMEND SEPARATE TANK UNITS FOR DIFFERENT SERVICES AND SEGREGATED HANDLING OF DIFFERENT COOLANTS.

- NO FLAMMABLE FLUIDS/MATERIALS WITH A FLASH POINT UNDER 200°F.
- NO TOXIC MATERIALS.
- NO CORROSIVE MATERIALS WITH PH LESS THAN 5 OR GREATER THAN 12.
- NO REACTIVE MATERIALS.


## 1.2 – PRECAUTIONS

- READ THROUGH THE "OPERATIONS MANUAL" COMPLETELY BEFORE ATTEMPTING TO OPERATE THE MACHINE.
  
- INSTALLED RELIEF VALVES ARE REQUIRED TO BE SET TO RATING OF VESSEL BEFORE USE AND SHOULD NOT BE CHANGED AS THE USE OF EXCESSIVE PRESSURE COULD CAUSE VESSEL DAMAGE.
  
- DO NOT ATTEMPT TO REMOVE SUMP CLEANER BEFORE RELIEVING PRESSURE IN THE DRUM TANK.
  
- WEAR SAFETY GOGGLES TO PROTECT EYES FROM SPLASHING LIQUIDS.
  
- KEEP HANDS AND FINGERS CLEAR OF DRUM TANK OPENING WHEN REMOVING DRUM TOP.


## SECTION 2 – THE DRUM TOP

### 2.1 – UNIT IDENTIFICATION

WHEN ORDERING PARTS OR ASKING QUESTIONS REGARDING YOUR SUMP SHARK, IT IS IMPORTANT TO HAVE THE MODEL AND SERIAL NUMBER OF THE UNIT. THE MODEL AND SERIAL NUMBER CAN BE FOUND ON THE SUMP CLEANER'S NAMEPLATE LOCATED ON THE TOP PANEL.

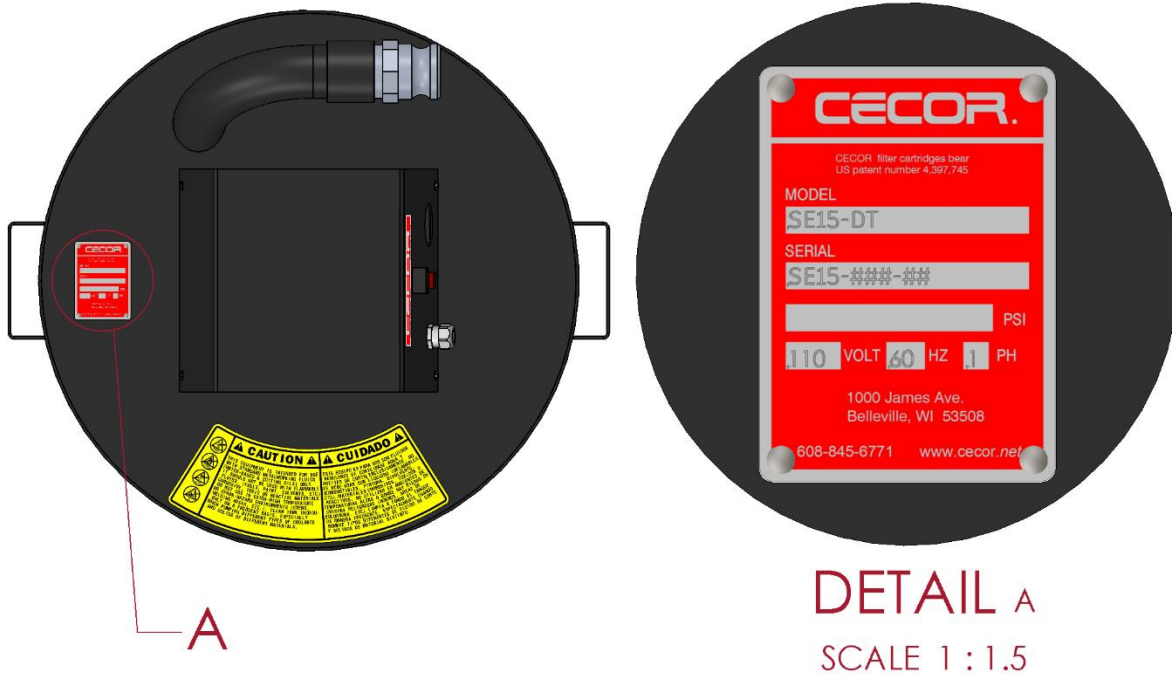

## 2.2 – DRUM TOP FEATURES

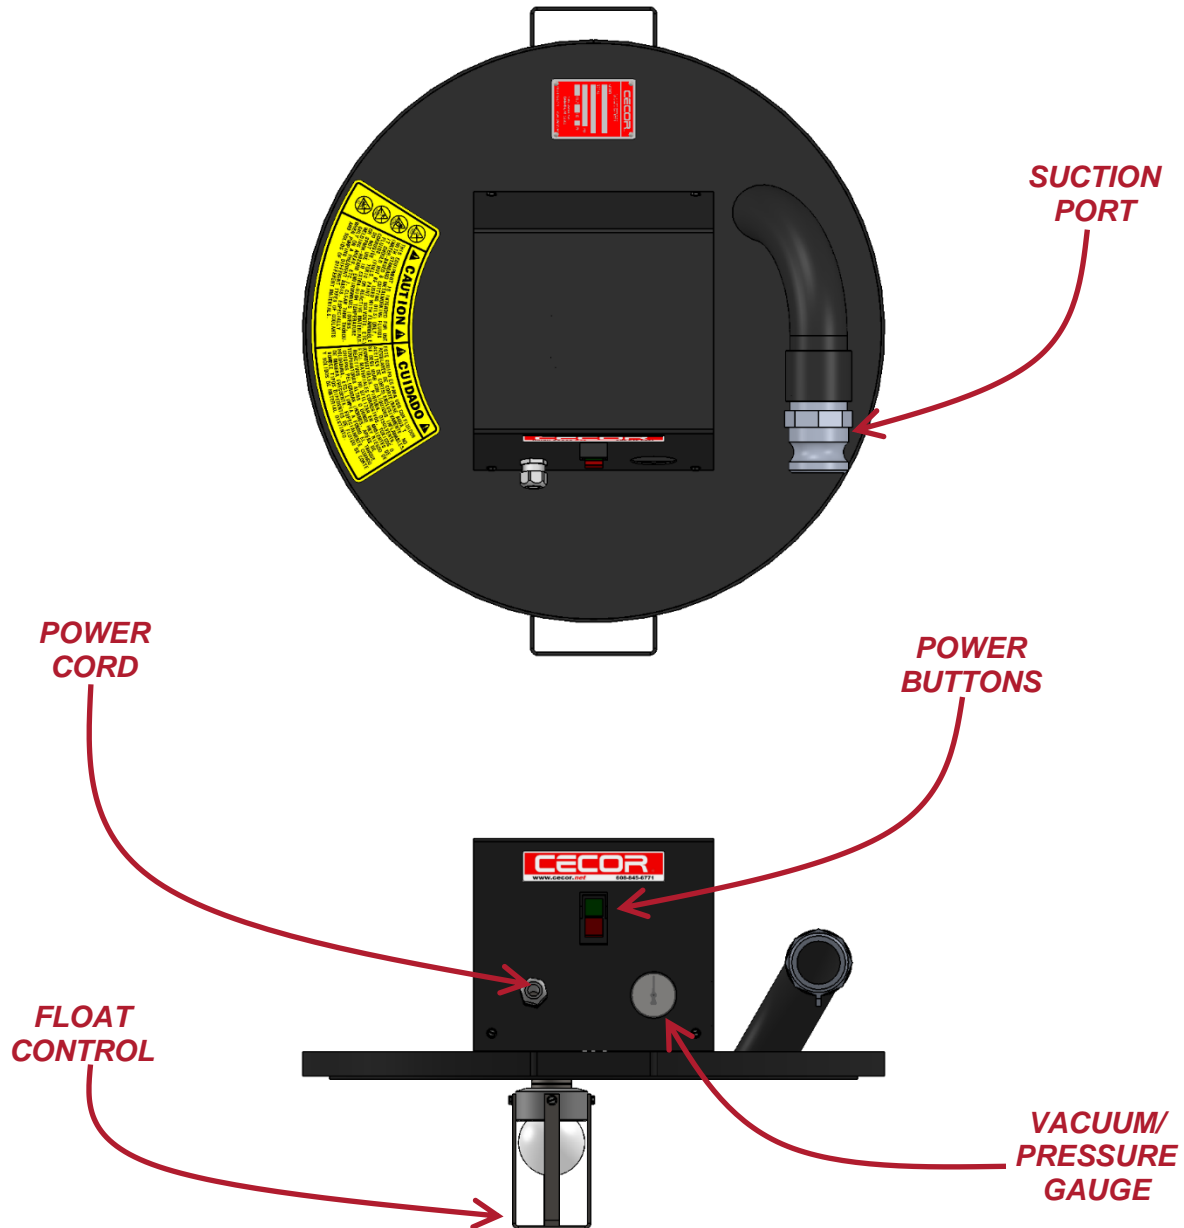

THE VACUUM CAN REACH UP TO 13 inHg. IF THE VACUUM IS TOO GREAT FOR THE 55-GALLON DRUMS USED, A VACUUM RELIEF CAN BE ADDED TO A BULKHEAD AND ADJUSTED DOWN TO DECREASE THE VACUUM. IF THE SUMP CLEANER IS USED IN CONJUNCTION WITH CECOR'S TX-55PL, HIGHER VACUUMS MAY BE REACHED. SEE REPAIR PARTS LIST FOR OPTIONAL VACUUM RELIEF VALVE.

## SECTION 3 – INSTALLATION


### 3.1 – ASSEMBLE FLOAT CONTROL

FOR SHIPPING PURPOSE, SOME MODELS MAY REQUIRE THE INSTALL OF THE DISCHARGE VALVE AND QUICK DISCONNECT ADAPTER. USE PIPE SEALANT ON ALL JOINTS AND TIGHTEN SECURELY.



### 3.2 – LOOSE ITEMS

SOME ITEMS MAY BE PACKAGED IN A BOX LOCATED ON THE SHIPPING PALLET. PLEASE REVIEW YOUR PACKING LIST TO SEE WHAT ADDITIONAL ITEMS YOU WILL BE RECEIVING.

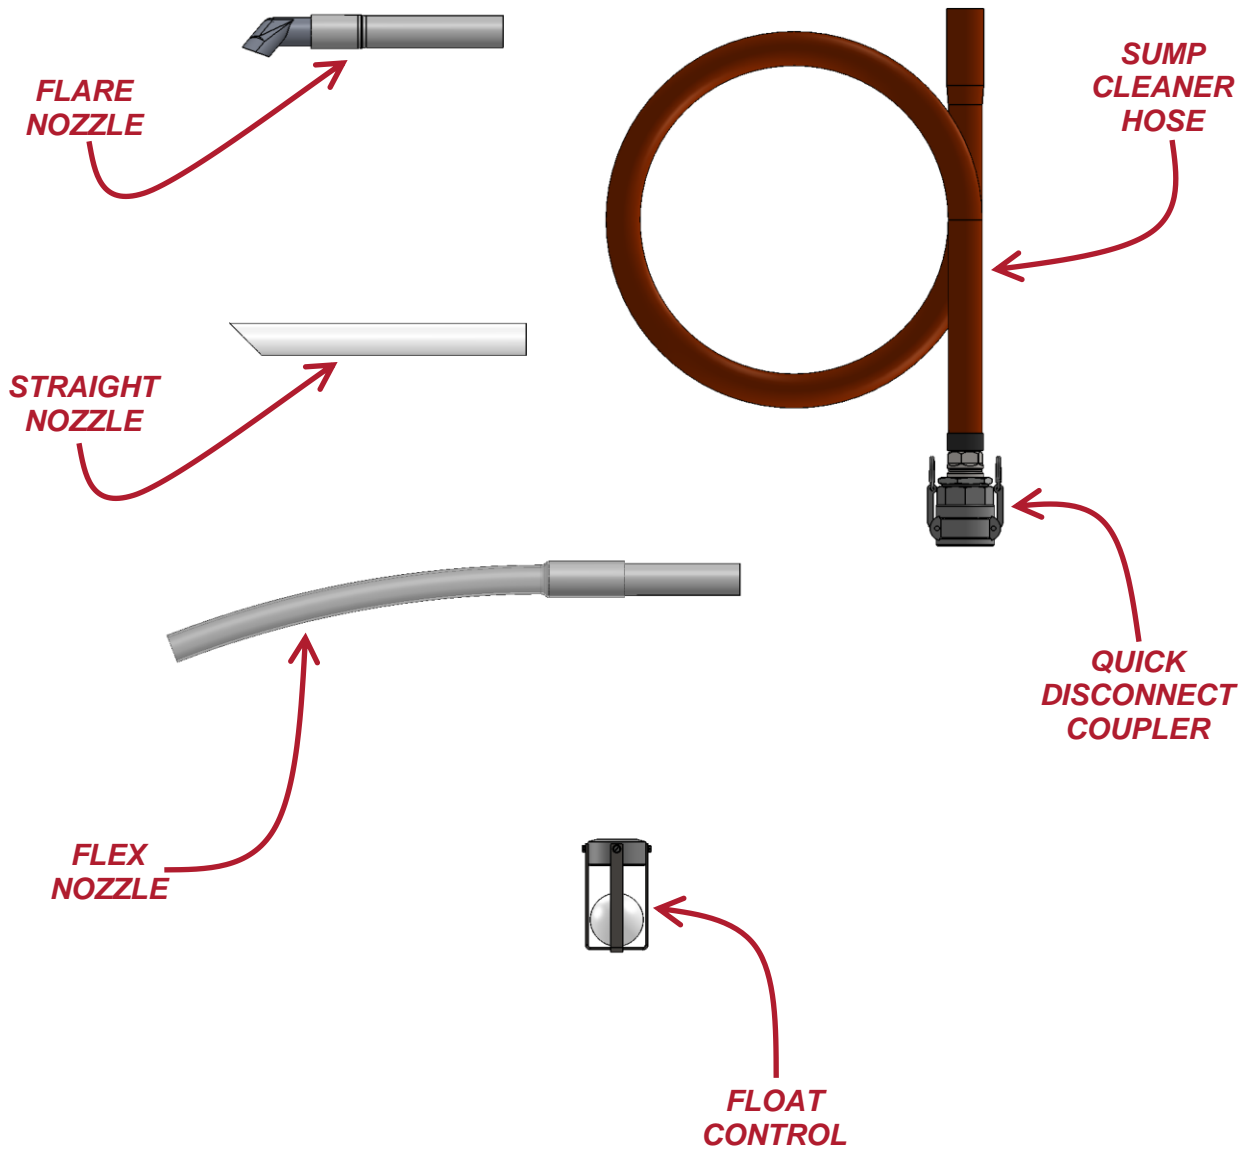



## SECTION 4 – OPERATION


### 4.1 – SETTING UP DRUM TOP

1. SCREW FLOAT CONTROL ONTO PIPE PROTRUDING THROUGH LID UNDERSIDE. (SEE 3.1 – ASSEMBLY FLOAT CONTROL)
2. PLACE UNIT ON AN OPTIONAL CECOR TX-55PL DRUM TANK OR AN EMPTY OPEN-ENDED 55 GALLON DRUM.




3. ATTACH THE SUMP CLEANER HOSE TO THE SUCTION PORT, AND INSERT SUCTION TOOL INTO HOSE END.

4. CONNECT THE POWER CORD TO 110 VAC SUPPLY.

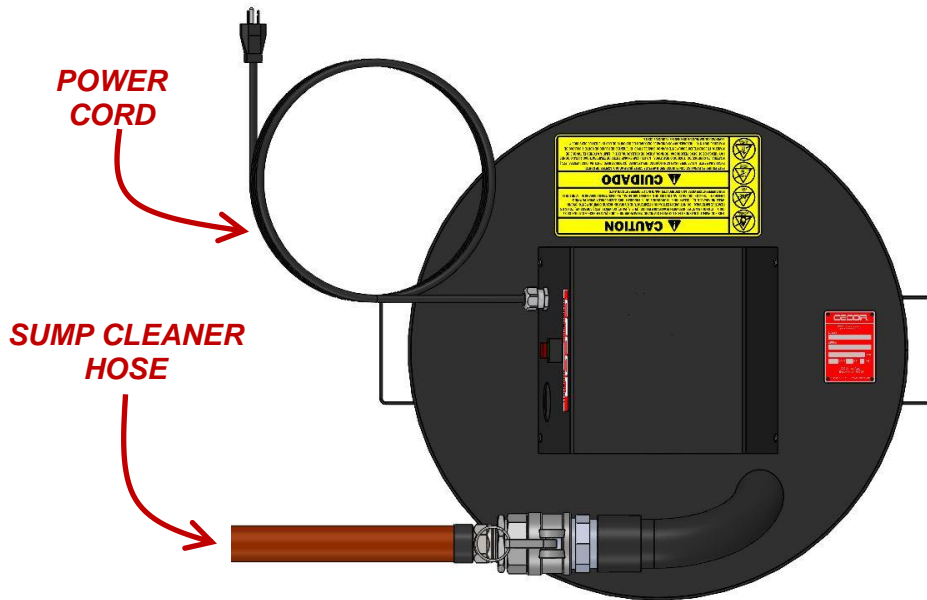

5. PUSH START BUTTON.

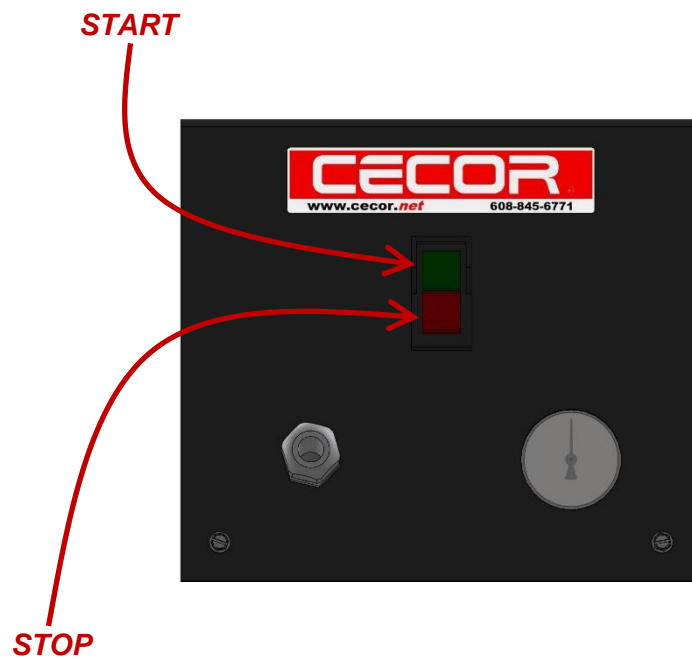

6. SUMP CLEANER IS READY FOR USE.

## SECTION 5 – MAINTENANCE


TO GET THE HIGHEST PERFORMANCE FROM YOUR SUMP CLEANER, IT IS IMPORTANT TO KEEP IT WELL MAINTAINED. BELOW IS A MAINTENANCE GUIDE THAT WILL KEEP YOUR SUMP CLEANER IN TOP-NOTCH, DEPENDABLE CONDITION. ANY WORN OR DAMAGED PART SHOULD BE REPLACED IMMEDIATELY. CECOR STOCKS SUMP CLEANER PARTS AND MOST CAN BE SHIPPED THE SAME OR THE NEXT DAY. CALL 1-800-356-9042 TO ORDER PARTS.

### 5.1 – DAILY MAINTENANCE

1. CHECK THE VACUUM GAUGE TO SEE THAT IT IS OPERATING AND READING CORRECTLY. TANK PRESSURE SHOULD NOT EXCEED PRESSURES OF 13 inHg.
2. DEFECTIVE RELIEF VALVE SHOULD BE REPLACED IMMEDIATELY.
3. CHECK FOR GASKET LEAKS AND ANY CHASSIS DAMAGE.

### 5.2 – WEEKLY MAINTENANCE

1. CLEAN AND INSPECT TANK FLOAT CONTROL. SEE THAT THE FLOAT BALL SEALS AGAINST THE GASKET. THE FLOAT CONTROL ASSEMBLY CAN BE ASSESSED THROUGH THE POT OPENING IN THE SUMP CLEANER.

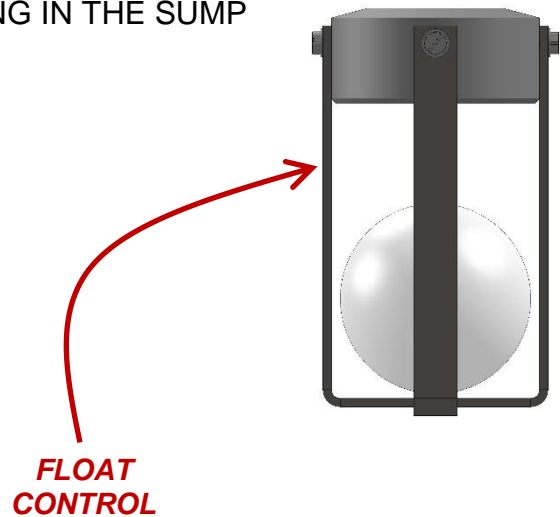

### 5.3 – MONTHLY MAINTENANCE


1. INSPECT SUMP CLEANER HOSE.

## SECTION 6 – TROUBLESHOOTING


PROBLEM	POSSIBLE CAUSE:	SOLUTION:
WILL NOT START	POWER SUPPLY	MAKE SURE THE UNIT IS PLUGGED INTO THE PROPER VOLTAGE.
	CIRCUIT BREAKER	CHECK ELECTRICAL SUPPLY FUSES OR CIRCUIT BREAKER.
	VAC MOTOR BRUSHES	CHECK BRUSHES; REPLACE IF NEEDED.
LOSS OF SUCTION	VACUUM GAUGE READS "0" VACUUM.	TANK IS FULL; EMPTY TANK.
		AIR LEAKAGE; CHECK GASKETS AND LOOSE CONNECTIONS.
	VACUUM GAUGE READS FULL VACUUM BUT HAS NO SUCTION.	CHECK HOSE FOR BLOCKAGE
		CHECK GAUGE; REPLACE IF NEEDED.

## SECTION 7 – REPAIR PARTS LIST

### 7.1 – DRUM TOP

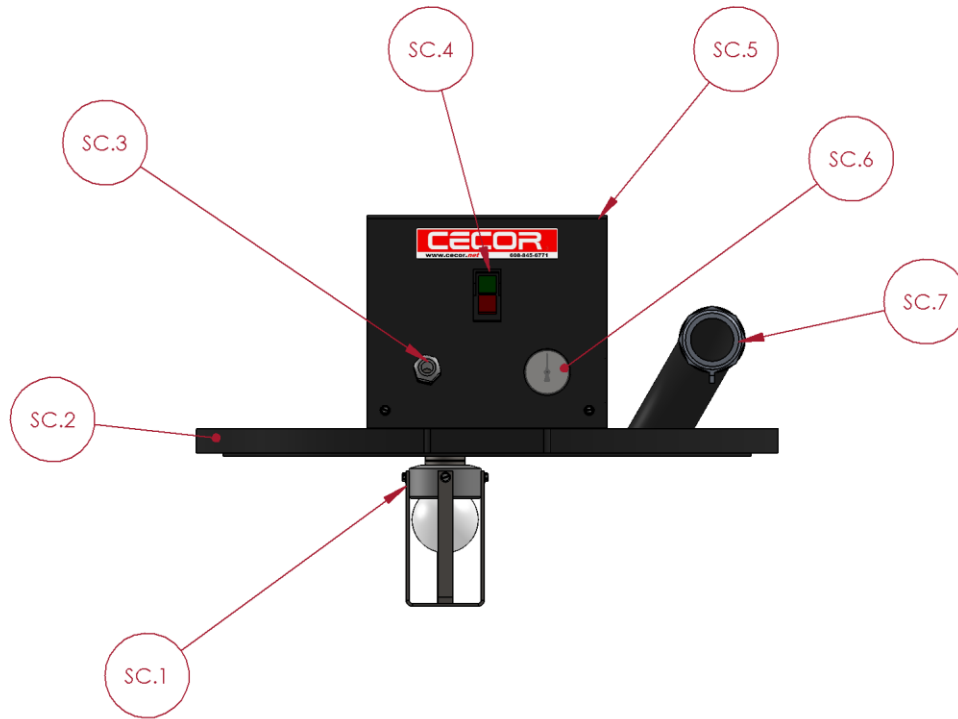


REF	PART NUMBER	DESCRIPTION
SC.1	ASC0.0111	FLOAT CONTROL
SC.2	ADT0.0001	DRUM GASKET
SC.3	PELE.MIS0.0013.0000	POWER CORD (NOT SHOWN)
SC.4	PELE.BUT0.0005.0000	POWER BUTTON
SC.5	ASC0.0109	HOOD ASSEMBLY
SC.6	PPLM.0000.0013.0000	GAUGE - VACUUM 2" BOTTOM MOUNT
SC.7	PPLM.0000.0031.0000	DISCONNECT ADAPTER - 2" - MALE

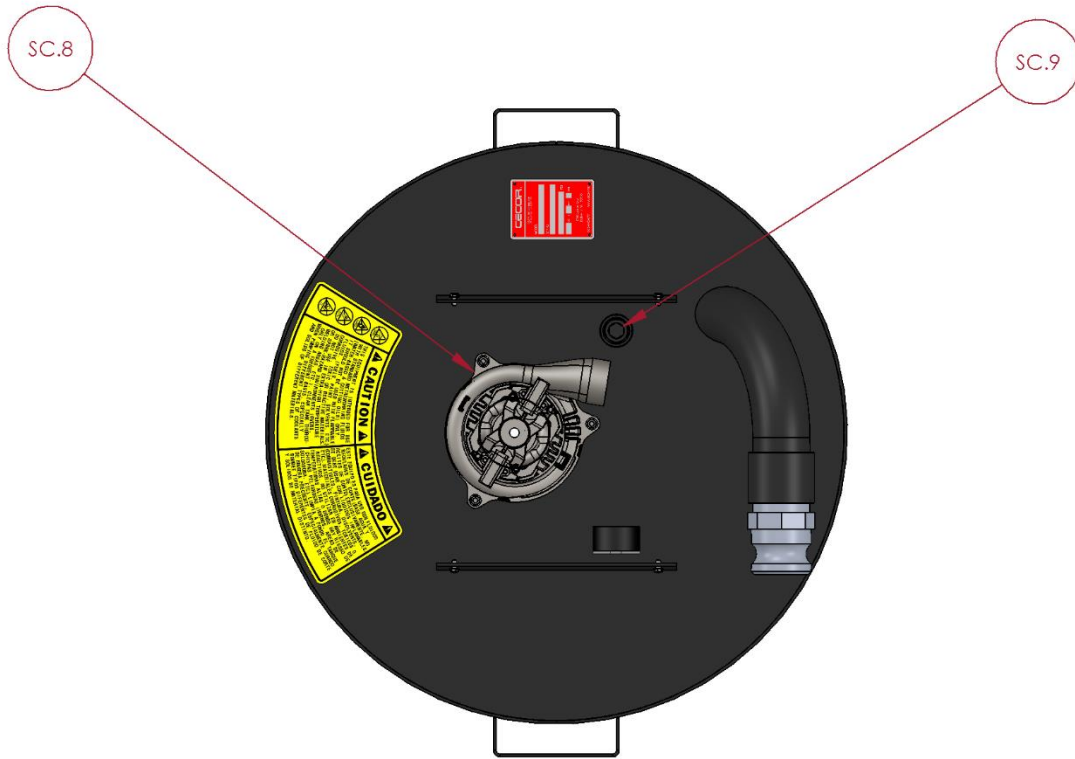


REF	PART NUMBER	DESCRIPTION
SC.8	PMOT.MOEN.0042.0KIT	VAC MOTOR w/ GASKET
SC.9	PVAL.RELF.0004.0000	VACUUM RELIEF VALVE (OPTIONAL)

## 7.2 – SUMP CLEANER HOSE 1-1/2” x 16’ (STANDARD)

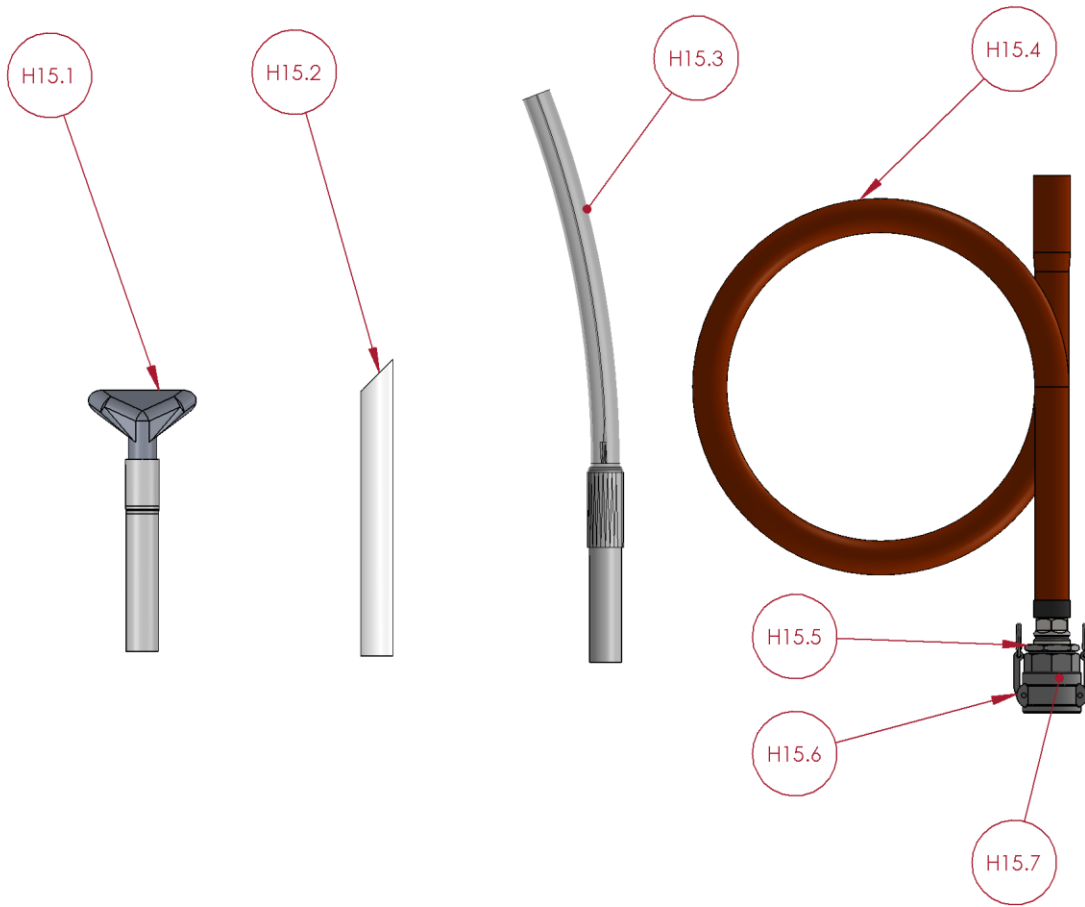

REF	PART NUMBER	DESCRIPTION
H15.1	ASC0.0032	TOOL - NOZZLE ASSEMBLY-FLARE 1-1/2"
H15.2	ADT0.0019	TOOL - NOZZLE - 1/4" STR.
H15.3	ASC0.0033	TOOL - NOZZLE ASSEMBLY-FLEXIBLE 1-1/2"
H15.4	ASC0.0025	HOSE ASSEMBLY - 1 1/2" x 16' - SUMP CLEANER
H15.5	FBG0.2000.1500.0000	BUSHING - REDUCER
H15.6	PPLM.0000.0016.0000	QUICK DISCONNECT COUPLER
H15.7	PGAS.0000.0003.0200	COUPLER GASKET


### 7.3 – SUMP CLEANER HOSE 2" x 16' (OPTIONAL)

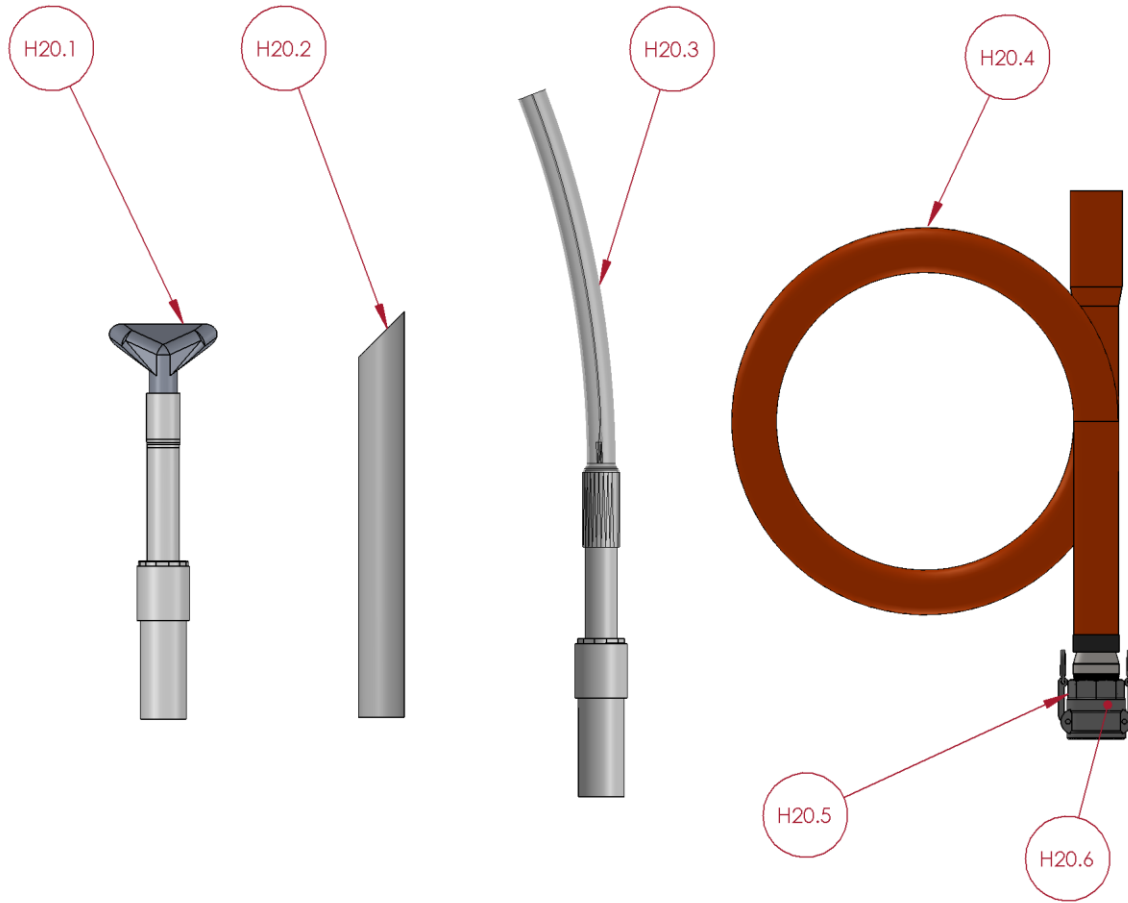

REF	PART NUMBER	DESCRIPTION
H20.1	ASC0.0034	TOOL - FLARED NOZZLE ASSEMBLY, 2" HOSE
H20.2	ADT0.0055	TOOL - STRAIGHT NOZZLE, 2"
H20.3	ASC0.0035	TOOL - FLEXIBLE NOZZLE ASSEMBLY, 2" HOSE
H20.4	ASC0.0030	HOSE ASSEMBLY - 2" x 16' - SUMP CLEANER
H20.5	PPLM.0000.0016.0000	QUICK DISCONNECT COUPLER
H20.6	PGAS.0000.0003.0200	COUPLER GASKET



## SECTION 8 – TX-55PL

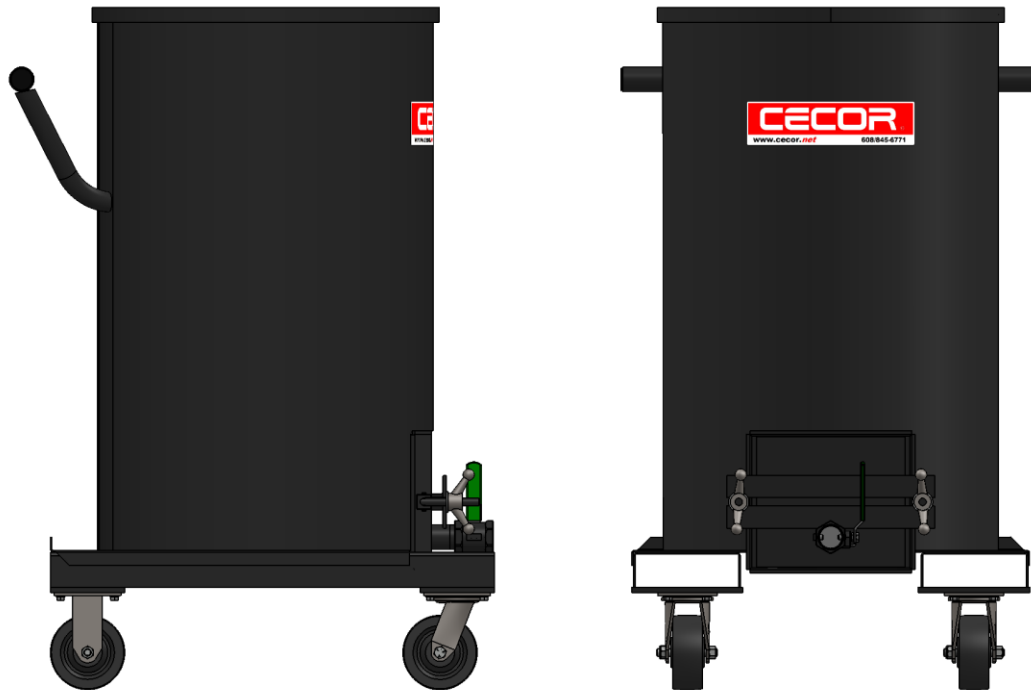

CECOR'S HEAVY DUTY 55-GALLON DRUM TANK, MADE OF HEAVY GAUGE STEEL, IS STRONGER THAN A STANDARD 55-GALLON DRUM. THE TANK IS MOUNTED ON FOUR CASTERS FOR EASY ROLLING AND MANEUVERABILITY. FORK POCKETS BUILT INTO THE BASE PROVIDE EASY HANDLING BY FORK TRUCK. THE TANK FEATURES AN 8" X 10" CLEANOUT DOOR FOR REMOVING SETTLED SOLIDS. VALVE IN DOOR PERMITS FLUID TO DRAIN OUT, LEAVING THE SOLIDS.

## SECTION 9 – WARRANTY

### WARRANTY STATEMENT

PLEASE PRINT OUR WARRANTY AT [HTTPS://CECOR.NET/CECOR-WARRANTY/](https://cecor.net/cecor-warranty/)

**SECTION 10 – RECORD MODEL & SERIAL NUMBER**

WHEN YOU RECEIVE YOUR CECOR SUMP SHARK, RECORD THE MODEL NUMBER, SERIAL NUMBER AND DATE DELIVERED FOR YOUR RECORDS.

<p><b>MODEL #:</b> _____</p> <p><b>SERIAL #:</b> _____</p> <p><b>DELIVERED:</b> _____ / _____ / _____</p>
---

**CECOR**®

